



**HELUKABEL®**

Perfect for cabinets –  
Simplify your  
installations!



 Cable Accessories

## **HELUTOP® Easy**

**Threadless cable gland  
for simple and quick assembly  
without any tools**

®

EASY

HELUTOP

**Available in Ø16 and Ø20  
as well as Ø25 and Ø32**



**HELUKABEL®**


## HELUTOP® Easy

With the new HELUTOP® Easy cable gland conventional fastening techniques like threaded holes and locknuts are unnecessary. A unique spring/snap system allows for quick and easy installation in hard-to-reach areas and in no-access spaces where locknuts can't be used. No tools are required.

Fastening the gland by hand achieves the same tight fit compared to traditional glands held in place with locknuts.


Thanks to short installation times and no need for threaded holes and locknuts, the HELUTOP® Easy offers substantial savings.

### Assembly - so easy

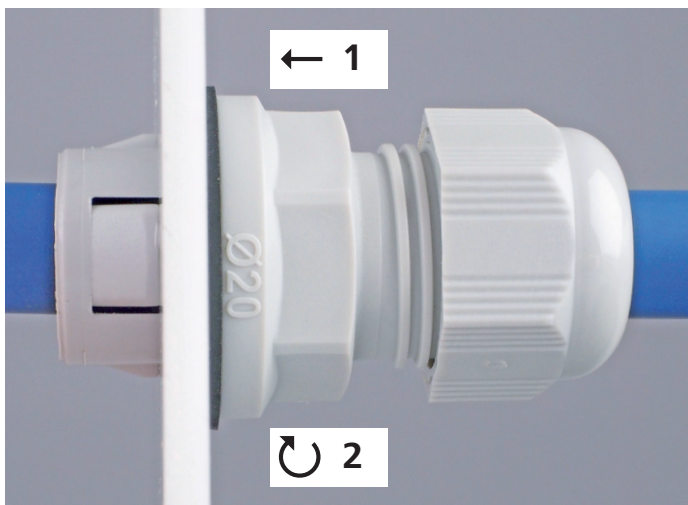

- 1 Push gland into opening
- 2 Tighten gland clockwise – finished

### Disassembly - almost as easy

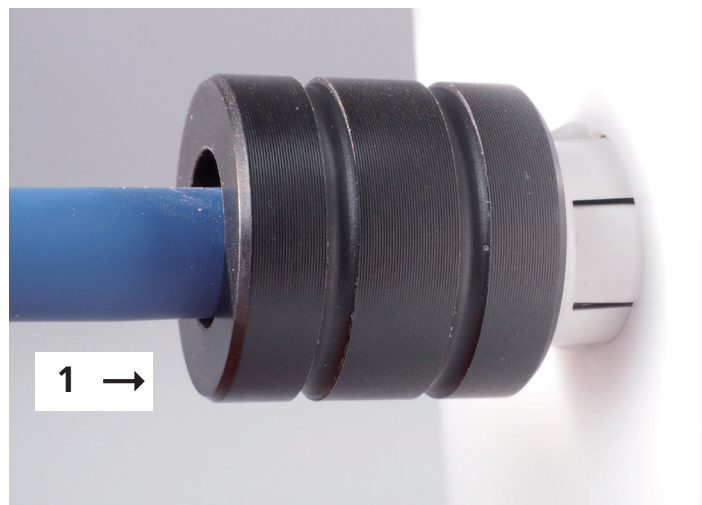

- 1 Loosen the gland by pressing the disassembly tool on the closure
- 2 Pull out gland – finished

## Advantages

- ✓ No tools required for installation
- ✓ No threaded holes required
- ✓ No locknuts required
- ✓ Same clamping range as HELUTOP HT-Series
- ✓ VDE-according to DIN EN 62444
- ✓ Gland and cable will be fixed with clockwise thread
- ✓ Installation in tight areas and no-access spaces (locknut side)
- ✓ Assembly: push cable gland in and turn clockwise – can be done by hand
- ✓ Cable gland fits as tightly as traditional gland held in place with threaded hole or locknut
- ✓ Hexagon of body and cap are same spanner size
- ✓ Large wall thickness range: 0,5 - 4,0 mm
- ✓ Quick and easy disassembly with separate tool. No damage to cable gland or wall.







**HELUKABEL®**



**Find your local HELUKABEL office at**  
**[www.helukabel-group.com](http://www.helukabel-group.com)**



**Get a quote**

Part No.	Required amount /unit
908054	
908055	
908368	
908369	

Company \_\_\_\_\_

Contact \_\_\_\_\_

Customer number (optional) \_\_\_\_\_

Street, No. \_\_\_\_\_

Zip, City \_\_\_\_\_

Telephone / Fax \_\_\_\_\_

E-Mail \_\_\_\_\_

Your message \_\_\_\_\_

☐ **Yes**, please include me in the mailing list for the HELUKABEL® e-mail newsletter.  
(please check)

**[helukabel-group.com](http://helukabel-group.com)**